

### Spare parts M4K-10

No.	Definition	Quantity
1	Tension handle	1
2	Sealer handle	1
2-1	Shoe	1
2-2	Arm	1
2-3	Stem	1
3	Feedwheel support handle	1
4	Frame	1
5	Side cover	1
6	Strap lifter	2
12	Sealer handle spacer	2
13	Excentric shaft	1
15	Die holder	1
16	Cam follower	1
17	Die holder shaft	1
19	Die	3
20	Cutter blade	1
21	Feedwheel support shaft	1
22	Roll pin	1
23	Clutch plug	1
24	Feedwheel	1
25	Feedwheel shaft	1
26	Tension pawl	1
27	Spring	3
28	Tension pawl	1
29	Ratchet wheel	1
31	Support plate	1
32	Adjustment plate	1
33	Knob	2
34	Feedwheel support spring	1
35	Tension pawl	1
36	Tension pawl shaft	1
37	Tension pawl shaft	1
38	Washer	2
39	Adjustment screw	1
40	Pin	2
42	Washer	1
43	Bush	1
44	Plate	2
45	Stopper	1
46	Screw	1
47	Guide arm	1
48	Guide arm	1
49	Screw	3
51	Strap guide	1
52	Strap guide	1
53	Strap guide	1
54	Screw	1
55	Strap guide	1
65	Screw	1
67	Screw	2
73	Roll pin M4x6	6
74	Screw M4x8	2
75	Screw M4x12	2
76	Screw M5x10	1
77	Screw M6x10	1
78	Screw M6x16	4
79	Screw M4x10	2
82	Washer	1
84	Roll pin 5x25	1
85	Roll pin 6x16	2
87	Small bearing 941/12	1
88	Large bearing 941/20	1
91	Support roller 2x15,8	59
92	Roll pin 3x9,8	3
94	Retaining wire diam.1,4	1