


# MODEL X1S1640

**SPOTNAILS**<sup>®</sup>  
 DIVISION OF PEACE INDUSTRIES, LTD.  
 1100 Hicks Rd  
 Rolling Meadows, IL 60008  
 Phone : 847-259-1620

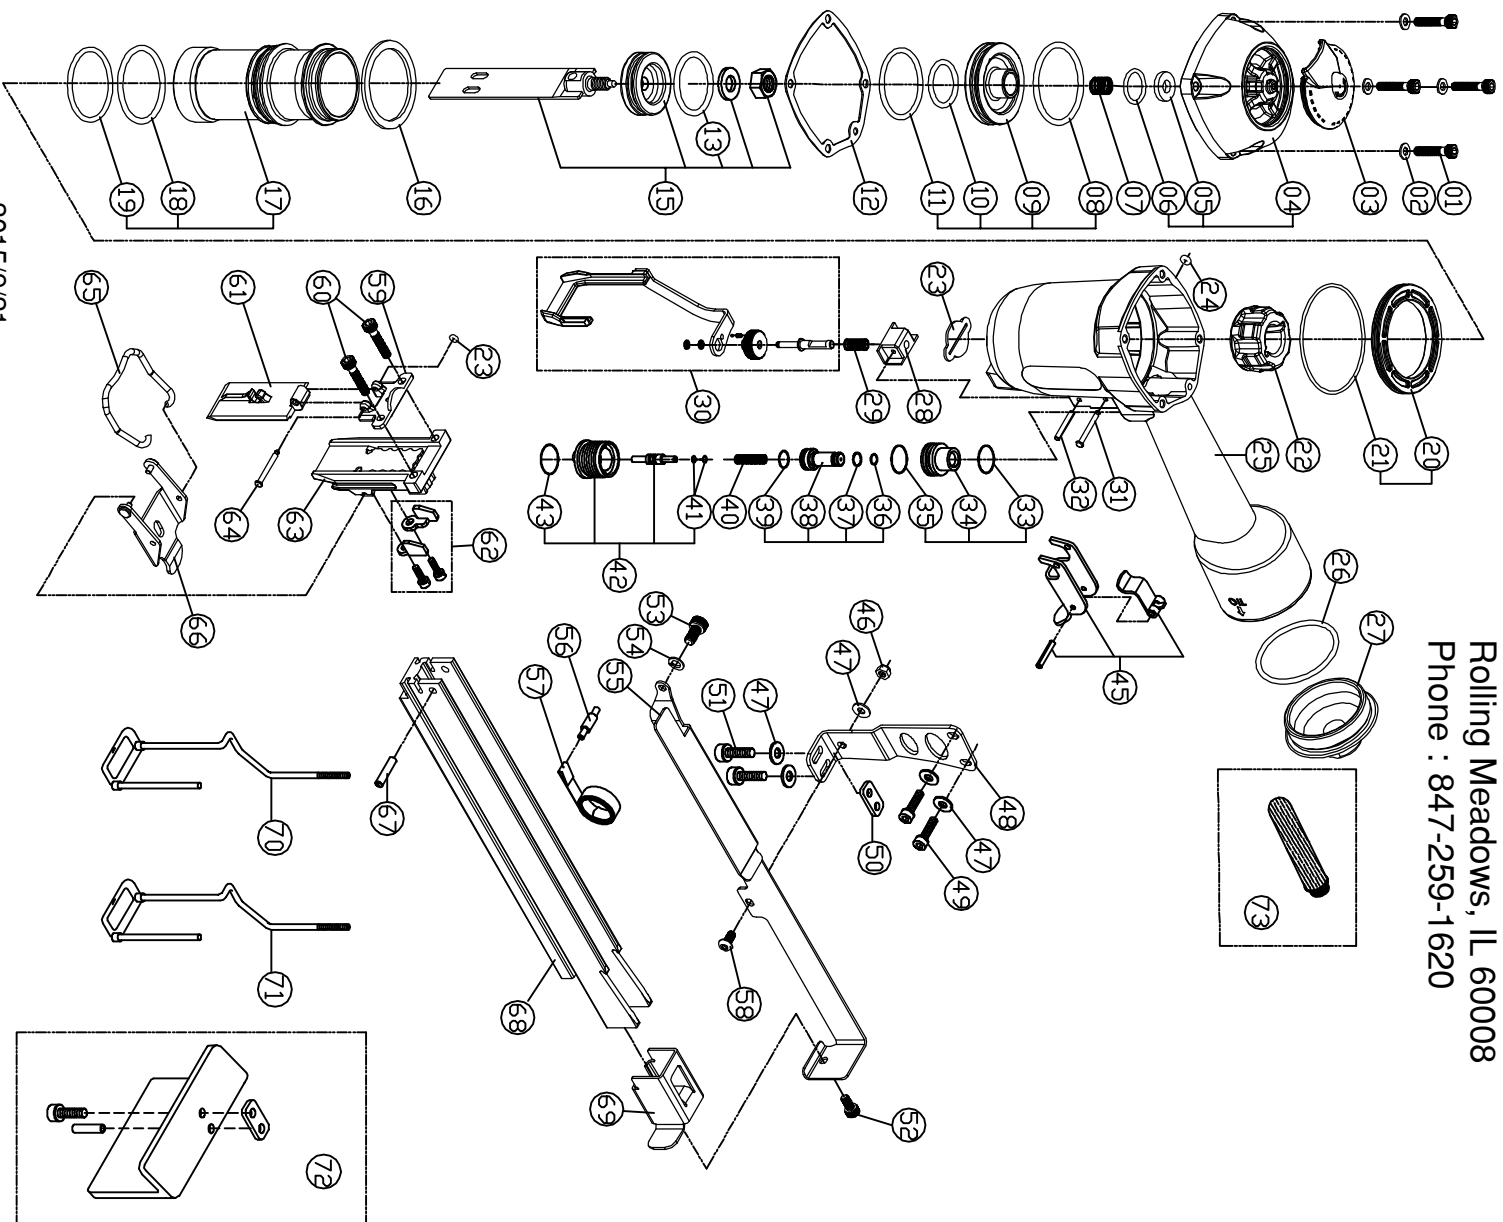

## SPOTNAILS MODEL X1S1640

Ref No.	Part No.	Description	Ref No.	Part No.	Description
01	P-24300	Cap Screw-4	38	P-22145	Pilot Valve
02	P-32211	Flat Washer-4	39	P-64336	O-Ring
03	P-70058	Exhaust Deflector	40	P-18227	Spring
04	P-60221	Cap	41	P-64383	Plunger O-Rings-2
05	P-15187	Exhaust Seal	42	AS-22037	Plunger Assembly
06	P-64378	O-Ring	43	P-64328	O-Ring
07	P-18327	Poppet Spring	45	AS-21008	Trigger Assembly
08	P-64601	Poppet O-Ring	46	P-26126	Nut
09	P-63055	Poppet	47	P-32170	Washer-5
10	P-64379	Piston Stop o-Ring	48	P-13128	Bracket
11	P-64602	Cylinder Seal O-Ring	49	P-24301	Screw-2
12	P-62094	Gasket	50	P-26159	Nut Plate
13	P-64228	Piston O-Ring	51	P-24308	Screw-2
15	AS-06110	<b>Piston &amp; Driver Assembly</b>	52	P-24430	Screw
16	P-03125	Guide Spacer	53	P-24317	Screw
17	P-05131	Cylinder	54	P-32229	Washer
18	P-64603	Cylinder O-Ring	55	P-12417	Magazine Cover
19	P-64604	O-Ring	56	P-07335	Negator Spring Pin
20	P-03126	Cylinder Guide	57	P-18334	Negator Spring
21	P-64605	O-Ring	58	P-24434	Screw
22	P-15273	Bumper	59	P-10285	Stationary Front Plate
23	P-15198	Return Seal	60	P-24358	Screw-2
24	P-64240	O-Ring-2	61	P-10287	Removable Front Plate
25	P-01308	Body	62	AS-99088	Wear Plate Filler
26	P-64312	O-Ring	63	P-08517	Wear Plate
27	P-60156	End Cap	64	P-07357	Pin
28	P-53165	Safety Guide	65	P-18333	Latch Spring
29	P-18328	Spring	66	P-04062	Quick Clear Latch
30	AS-53087	Safety Assembly	67	P-07334	Pin
31	P-07327	Trigger Pin	68	P-12410	Magazine
32	P-07262	Pin	69	P-09211	Pusher
33	P-64332	Valve Housing O-Ring	70	AS-53085	Lathing Safety (Optional)
34	P-22144	Trigger Valve Cap	71	AS-53086	Roofing Safety (Optional)
35	P-64333	O-Ring	72	AS-97296	<b>Single Guide Assy. (Optional)</b>
36	P-64334	O-Ring	73	P-97454	Filter (Optional)
37	P-64335	O-Ring			

◆ **Parts Included In AS- 97403 O-Ring And Seal Kit:**