

9

SPARE PARTS KIT / RESERVDELAR SOM DELAR / ERSATZTEIL-SET / JEU DE PIÈCES

SEAL KIT 184946 (all pneumatic B and F staplers)

Includ all parts as Fig. 17.

LUBRICATON (foot valve)

184948 Permanent greas 70 gr

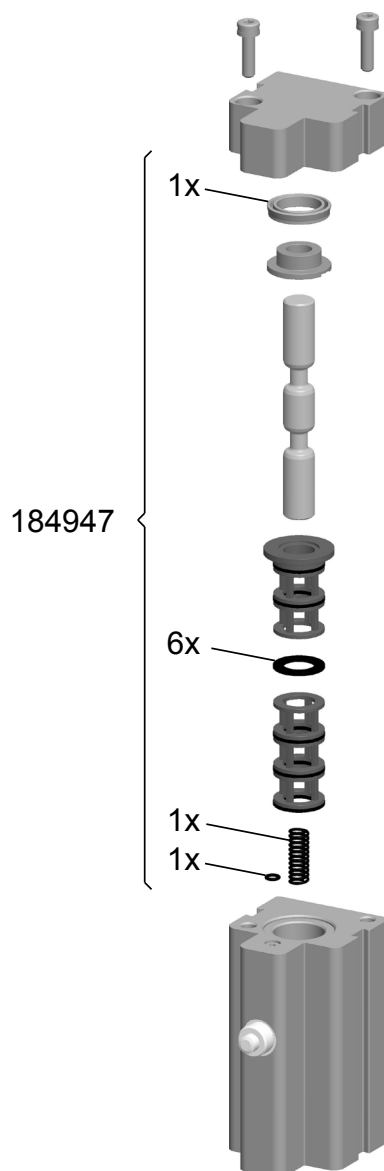


Fig. 17

991067 FAST DEAERATOR (all pneumatic B and F staplers)

Seal as Fig. 18.


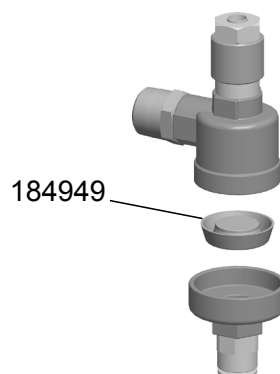


Fig. 18

*** Recommended wear parts * Rekommenderade slitdelar * Empfohlene Verschleisssteile**

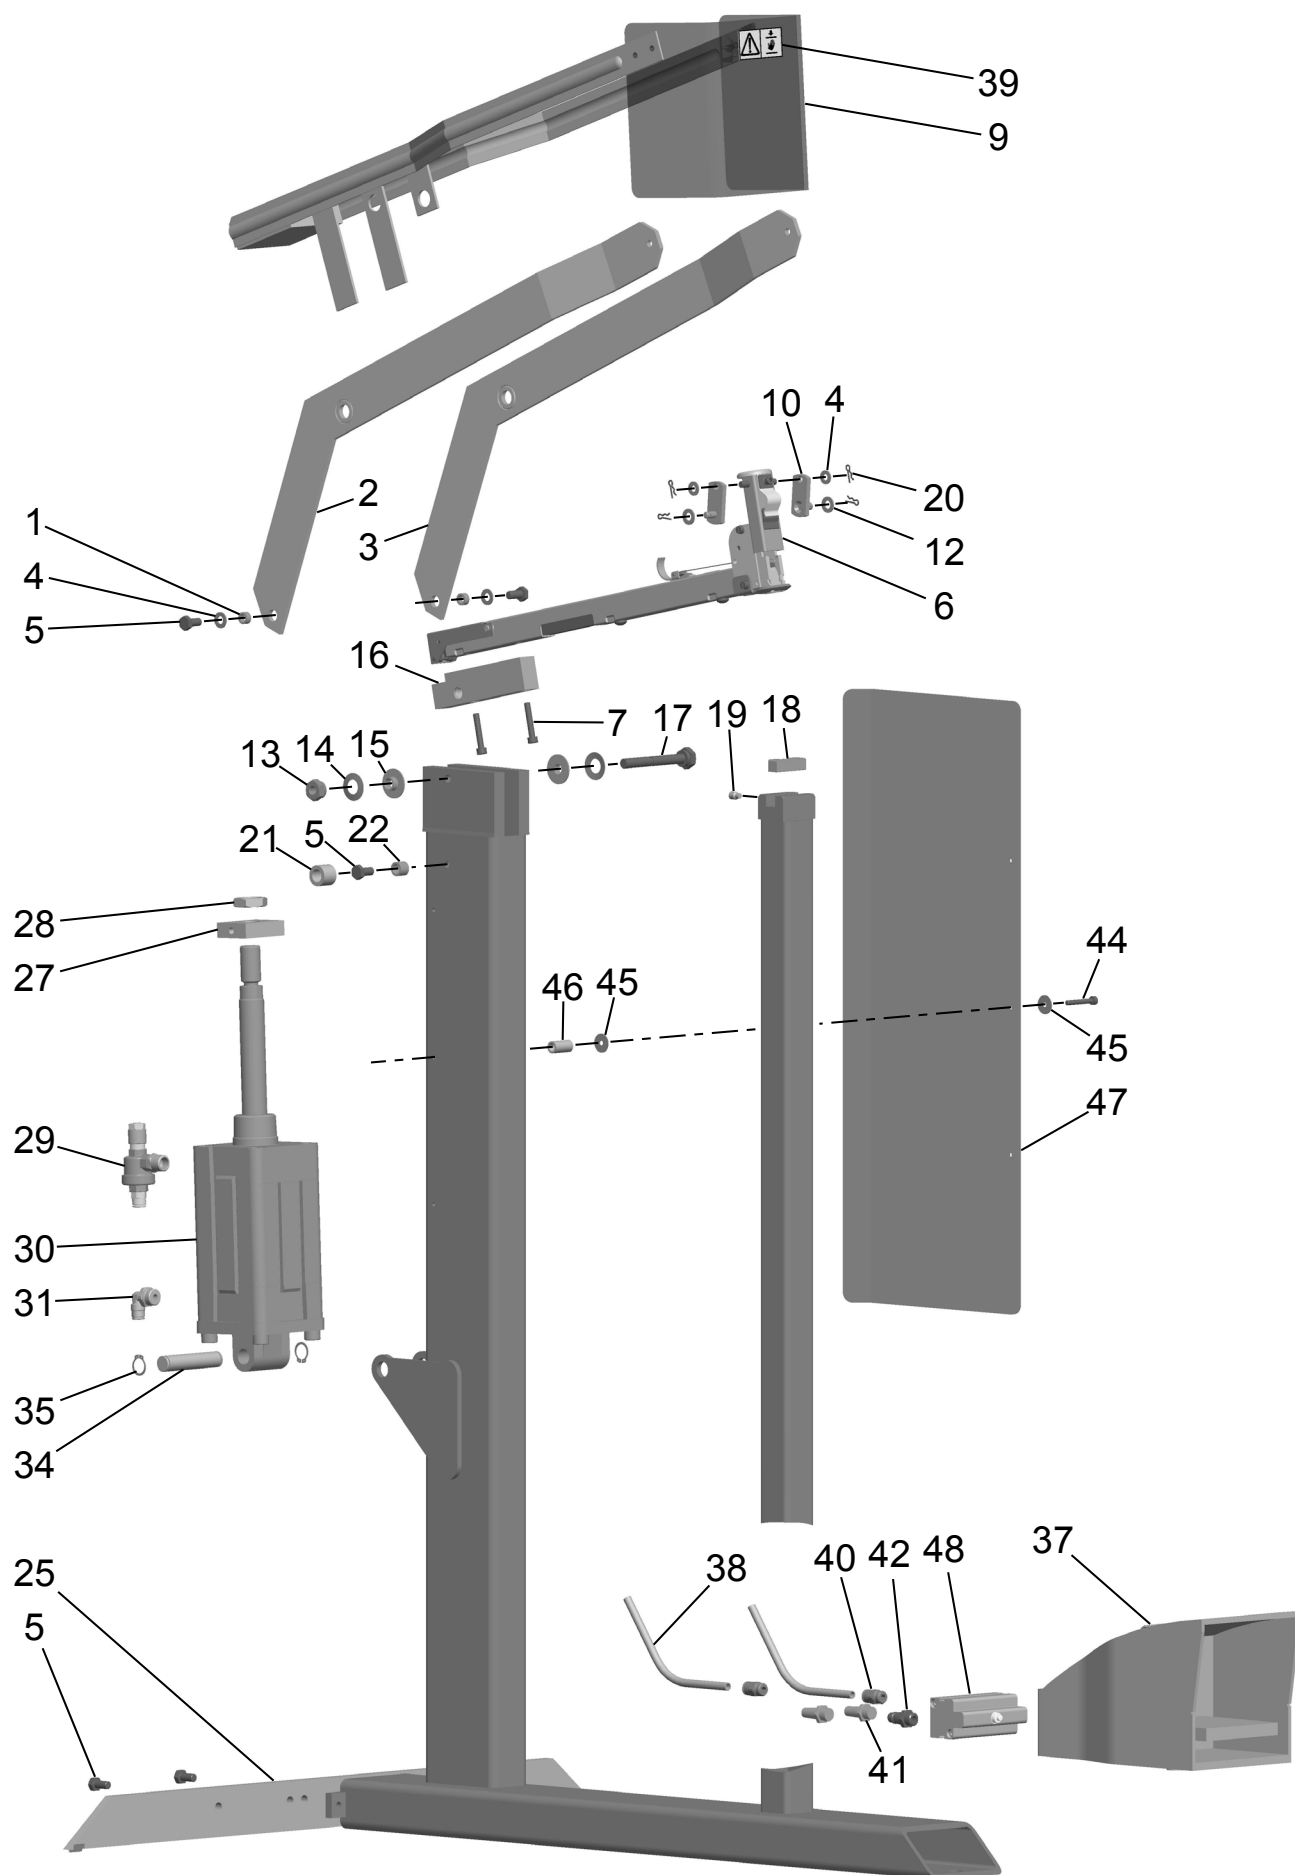

10

Parts list Head HH53/09-12

When ordering please indicate part number


Reservdelsslista HH53/09-12

Vid beställning var vänlig ange artikelnummerna

Teileliste Heftkopf HH53/09-12

Bei Bestellungen immer Artikel-Nr. angeben

Pos.	Part No. Artikelnr. Artikel-Nr.	Part Name	Benämning	Benennung	Quantity Antal Stückzahl
	132204	Stapling head cpl.	Häfthuvud komplett	Heftkopf kpl.	
1	946009	Nut	Mutter	Mutter	2
2	162600	Rail, inner	Klammerbana inre	Innere Schiene	1
3	132557	Rail, outer	Klammerbana yttre	Äusserer Schiene	1
4	946615	Screw	Skruv	Schraube	3
6	145031	Spring pin	Spännstift	Spannstift	1
7	132704	Magazine	Klammermagasin	Magazin	1
8	157000	Carton protector	Kartongskydd	Kartonschutz	1
9	946502	Screw	Skruv	Schraube	1
11	150147	Spring roller	Fjäderdistans	Federrolle	2
12	951035	Circlip	Axelsäkring	Seegerring	2
* 13	174032	Pucher spring	Frammatarfjäder	Scheiberfeder	1
14	945010	Tension pin	Spännstift	Spannstift	1
15	133041	Pusher	Frammatare	Schieber	1
16	145073	Rivet	Nit	Niet	1
17	162167	Breech	Slutstycke	Verschlussstück	1
18	174030	Spring	Fjäder	Feder	1
19	160044	Catch	Spärr	Sperre	1
20	139103	Breech compl.	Slutstycke kompl.	Verschlussstück kompl.	1
21	181001	Plunger head pin	Tryckledarpinne	Schlagkopfstift	1
22	157003	Plunger head	Tryckknapp	Schlagkopf	1
23	133508	Plunger carrier	Tryckledare	Schlagführer	1
27	133501	Plunger head compl.	Tryckledare kompl.	Schlagkopf kompl.	1
28	134026	Screw compl.	Låsskruv kompl.	Schraube kompl.	1
29	147001	Square washer	Fjäderskydd	Vierkantscheibe	1
30	174014	Trip block spring	Spärrfjäder	Sperrfeder	2
31	160026	Staple trip block	Klammerspärr	Klammersperre	1
* 32	173001	Return spring	Retur fjäder	Rückstellfeder	1
33	156204	Spring holder	Fjäderhållare	Federhalterung	1
* 34	164003	Driver blade	Drivare	Treiber	1
35	946507	Screw	Skruv	Schraube	1
36	947002	Lock washer	Låsbricka	Sicherungsscheibe	2
37	162017	Side plate right	Mantelplåt höger	Seitenplatte, rechts	1
38	162016	Side plate left	Mantelplåt vänster	Seitenplatte, links	1
39	946508	Screw	Skruv	Schraube	1
40	173000	Spring	Returfjäder	Feder	1
41	161000	Staple guide block	Klammerledare	Klammerführer	1

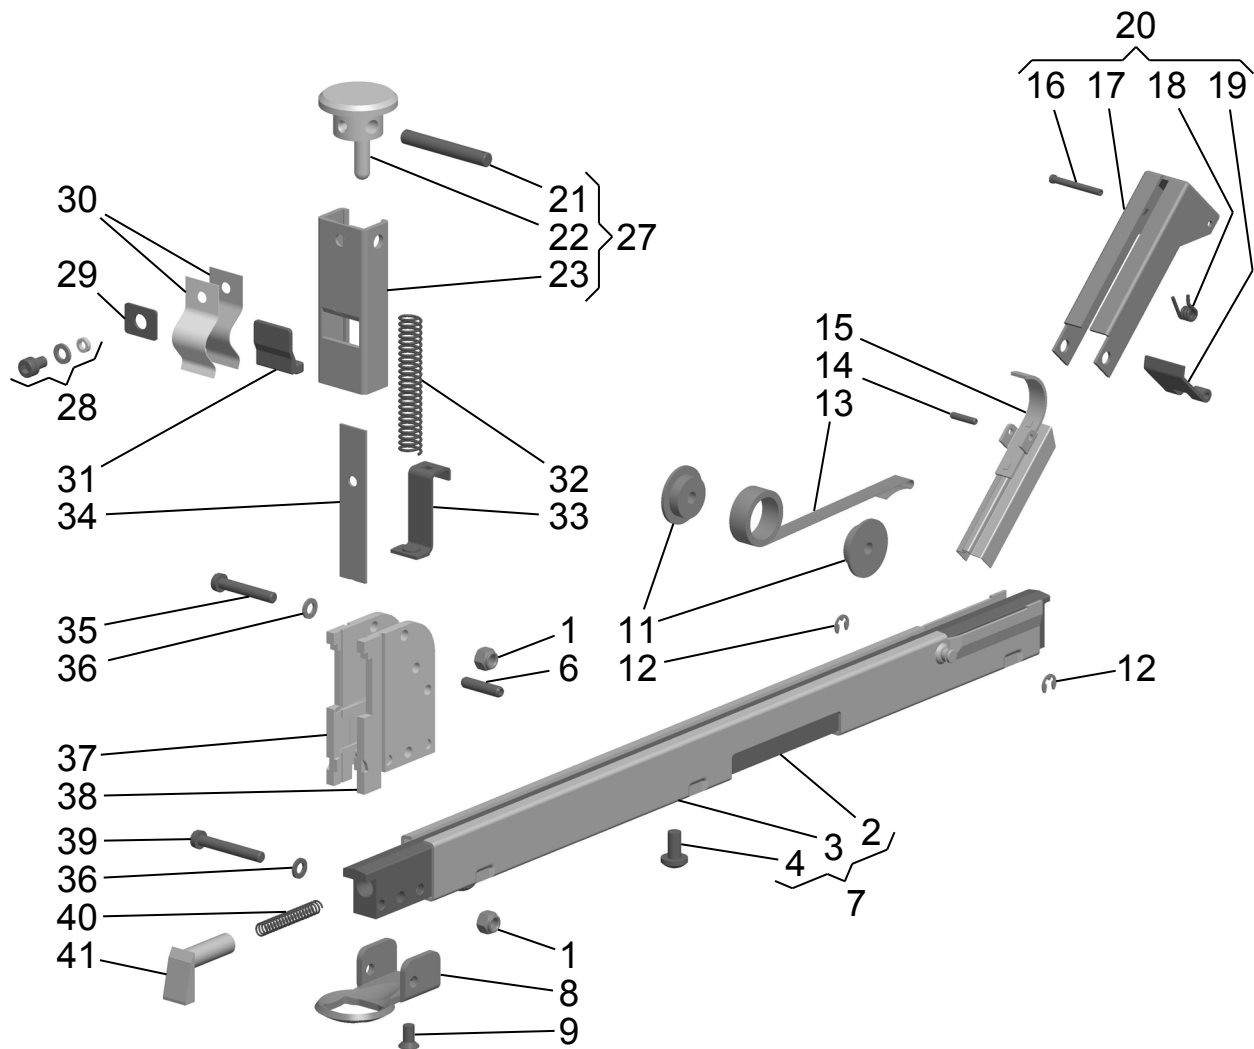

[illegible]